



3 ESD/EOS

Intel® Manufacturing Enabling Guide

May 2010



Disclaimers

The information contained in this document is provided for informational purposes only and represents the current view of Intel Corporation ("Intel") and its contributors ("Contributors") on quality, as of the date of publication. Intel and the Contributors make no commitment to update the information contained in this document, and Intel reserves the right to make changes at any time, without notice.

THIS DOCUMENT IS PROVIDED "AS IS." NEITHER INTEL, NOR THE CONTRIBUTORS MAKE ANY REPRESENTATIONS OF ANY KIND WITH RESPECT TO PRODUCTS REFERENCED HEREIN, WHETHER SUCH PRODUCTS ARE THOSE OF INTEL, THE CONTRIBUTORS, OR THIRD PARTIES. INTEL, AND ITS CONTRIBUTORS EXPRESSLY DISCLAIM ANY AND ALL WARRANTIES, IMPLIED OR EXPRESS, INCLUDING WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE, NON-INFRINGEMENT, AND ANY WARRANTY ARISING OUT OF THE INFORMATION CONTAINED HEREIN, INCLUDING WITHOUT LIMITATION, ANY PRODUCTS, SPECIFICATIONS, OR OTHER MATERIALS REFERENCED HEREIN. INTEL, AND ITS CONTRIBUTORS DO NOT WARRANT THAT THIS DOCUMENT IS FREE FROM ERRORS, OR THAT ANY PRODUCTS OR OTHER TECHNOLOGY DEVELOPED IN CONFORMANCE WITH THIS DOCUMENT WILL PERFORM IN THE INTENDED MANNER, OR WILL BE FREE FROM INFRINGEMENT OF THIRD PARTY PROPRIETARY RIGHTS, AND INTEL, AND ITS CONTRIBUTORS DISCLAIM ALL LIABILITY THEREFOR.

INTEL, AND ITS CONTRIBUTORS DO NOT WARRANT THAT ANY PRODUCT REFERENCED HEREIN OR ANY PRODUCT OR TECHNOLOGY DEVELOPED IN RELIANCE UPON THIS DOCUMENT, IN WHOLE OR IN PART, WILL BE SUFFICIENT, ACCURATE, RELIABLE, COMPLETE, FREE FROM DEFECTS OR SAFE FOR ITS INTENDED PURPOSE, AND HEREBY DISCLAIM ALL LIABILITIES THEREFOR. ANY PERSON MAKING, USING OR SELLING SUCH PRODUCT OR TECHNOLOGY DOES SO AT HIS OR HER OWN RISK.

Licenses may be required. Intel, its contributors and others may have patents or pending patent applications, trademarks, copyrights or other intellectual proprietary rights covering subject matter contained or described in this document. No license, express, implied, by estoppel or otherwise, to any intellectual property rights of Intel or any other party is granted herein. It is your responsibility to seek licenses for such intellectual property rights from Intel and others where appropriate.

Limited License Grant. Intel hereby grants you a limited copyright license to copy this document for your use and internal distribution only. You may not distribute this document externally, in whole or in part, to any other person or entity.

LIMITED LIABILITY. IN NO EVENT SHALL INTEL, OR ITS CONTRIBUTORS HAVE ANY LIABILITY TO YOU OR TO ANY OTHER THIRD PARTY, FOR ANY LOST PROFITS, LOST DATA, LOSS OF USE OR COSTS OF PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, OR FOR ANY DIRECT, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF THIS DOCUMENT OR RELIANCE UPON THE INFORMATION CONTAINED HEREIN, UNDER ANY CAUSE OF ACTION OR THEORY OF LIABILITY, AND IRRESPECTIVE OF WHETHER INTEL, OR ANY CONTRIBUTOR HAS ADVANCE NOTICE OF THE POSSIBILITY OF SUCH DAMAGES. THESE LIMITATIONS SHALL APPLY NOTWITHSTANDING THE FAILURE OF THE ESSENTIAL PURPOSE OF ANY LIMITED REMEDY.

Copyright © 2010, Intel Corporation. All rights reserved.* Other names and brands may be claimed as the property of others.



Contents

3.1	ESD	3-4
3.1.1	Electrostatic Discharge	3-4
3.1.2	Why Should I Care About Electronic Discharge?	3-4
3.1.3	Intel’s Commitment to Eliminate ESD Damage.....	3-4
3.1.4	What is ESD	3-5
3.1.5	Common Causes of ESD	3-5
3.1.6	ESD Occurs at All Levels of Integration	3-6
3.1.7	What Can I Do To Prevent ESD?	3-6
3.1.8	Outfitting an Effective Workplace	3-7
3.1.9	Summary	3-8
3.2	Electrical Overstress.....	3-9
3.2.1	Electrical Overstress	3-9
3.2.2	How EOS Damages a Component.....	3-9
3.2.3	Common Causes of EOS	3-10
3.2.4	Prevention of EOS	3-11
3.3	References	3-12
3.4	Revision Summary	3-13

Figures

Figure 3-1.	Junction Spiking Failure	3-9
Figure 3-2.	Melted Metallization Failure	3-10
Figure 3-3.	Open Bond Wire Failure	3-10



3.1 ESD

3.1.1 Electrostatic Discharge

Electrostatic discharge (ESD) costs the electronics industry millions of dollars each year in damaged components, non-functional circuit boards and scrambled or missing information. ESD can occur in the manufacturing, shipping, receiving, and field handling of integrated circuits or computer boards with no visible signs of damage. A malfunction in these components or boards can occur immediately or the apparatus may perform for weeks, months, or even years before an unpredictable and premature breakdown causes a field failure.

3.1.2 Why Should I Care About Electronic Discharge?

When you incorporate electronic components or boards into your products, ESD damage can have a direct impact on your company's reputation and profits. That is because electrostatic damage directly affects the quality and reliability of your products. However, for a small investment in time, manpower, and equipment, you can virtually eliminate ESD-caused problems. The tangible benefits to you include:

- Higher manufacturing yields
- Less rework and inventory
- Reduced overall costs
- Fewer field failures and warranty calls
- Increased product reliability
- More repeat business resulting in greater profits

3.1.3 Intel's Commitment to Eliminate ESD Damage

Intel manufactures and uses electronic components, and has implemented a comprehensive ESD prevention program to ensure that its products are delivered to customers with the highest possible



reliability. Our experts would like to share with our suppliers and customers what they have learned about ESD control. Using this information, you can implement similar preventive practices in your factories and warehouses. As a result, component failures can be minimized

3.1.4 What is ESD

ESD is the transfer of electrical charge between two bodies at different potentials, either through direct contact or through an induced electrical field. It is the phenomenon that gives you a mild shock when you walk across a carpeted floor and then touch a doorknob. While this discharge gives a harmless shock to humans, it is lethal to sensitive electronics. For example, the simple act of walking across a vinyl floor can generate up to 12,000 V of static electricity. That is many times the charge needed to ruin a standard Shottky TTL component.

Several technical failure mechanisms associated with ESD cause damage to microelectronic devices, including gate oxide breakdown, junction spiking and latch-up.

- Gate oxide failure is a breakdown of the dielectric between the transistor gate and channel resulting in excessive leakage or a functional failure
- Junction spiking failure is a migration of the metallization through the source/drain junction of MOS transistors causing leakage or a functional failure
- Latch-up failure can be triggered by ESD, causing an internal feedback mechanism that gives rise to temporary or permanent loss of circuit function

3.1.5 Common Causes of ESD

Electrostatic generation arising from friction between two materials is called triboelectric charging. It occurs when two materials are separated or rubbed together. Examples include:



- Opening a common plastic bag
- Removing adhesive tape from a roll or container
- Walking across a floor
- Transporting computer boards or components around in their trays on carts
- Sliding circuit boards on a work bench

When handling parts or their containers, ungrounded personnel can transfer high static charges. Unless these static charges are slowly dissipated, ESD event can inflict damage to the devices.

Electrical fields can penetrate electrical devices. An ungrounded person handling a component or computer board in a non-static shielded container can inadvertently create an electrical charge imbalance on the sensitive electronic device within the container.

3.1.6 ESD Occurs at All Levels of Integration

Electrostatic discharge is not selective when affecting your products. It can strike components directly or indirectly by passing to the component via connectors and cables. Components mounted on circuit boards are also susceptible. In-line film resistors between inputs and off-board connectors provide only marginal ESD protection and are often damaged themselves.

3.1.7 What Can I Do To Prevent ESD?

Fortunately, preventing ESD can be relatively easy and inexpensive. Two areas of focus are:

- Eliminating static charges from the workplace
- Properly shielding components and assemblies from static fields

Eliminating static electricity in the workplace is accomplished by selecting low-charge generating materials. Selecting low-charge



generating materials minimizes charge from being formed in the first place, grounding operators, equipment, and devices (components and computer boards). Grounding prevents static charge buildup and electrostatic potential differences. Electrical field damage is averted by transporting products in special electrostatic shielding packages.

Many vendors of ESD-protective equipment are willing to audit your facilities, recommend appropriate procedures and materials, and assist in their implementation. You may choose to consult with such a firm to determine your exact requirements; in the meantime, review this chapter to gain an understanding of the basic components of a sound ESD prevention program.

3.1.8 Outfitting an Effective Workplace

An effective workplace should be outfitted with the following items:

ESD protective clothing/smocks. Street clothing must not come in contact with components or computer boards since the various materials in clothing can generate high static charges. ESD protective smocks, manufactured with conductive fibers, are recommended.

Electrostatic shielding containers or totes. These containers (bags, boxes, etc.) are made of specially formulated materials which protect sensitive devices during transport and storage. They must be sealed to work as intended.

Antistatic or dissipative carriers. These provide ESD protection during component movement in the manufacturing process. It must be noted that antistatic materials alone will not provide complete protection. They must be used in conjunction with other methods such as totes or electrostatic shielding bags.

Dissipative table mat or table surface. The mat or table surface should provide a controlled discharge of static voltages and must be grounded. The surface resistance is designed such that sliding a



computer board or component across its surface will not generate significant voltage.

Personal grounding. A wrist strap or ESD cuff is kept in constant contact with bare skin and has a cable for attaching it to the ESD ground. The purpose of the wrist strap is to drain off the operator's static charge. The wrist strap cord has a current-limiting resistor for personnel safety. Wrist straps must be tested frequently to ensure that they are undamaged and operating correctly. When a wrist strap is impractical, special heel straps or shoes can be used. These items are effective only when used in conjunction with a dissipative floor or floor mat.

ESD protective floor or mat. The mat must be grounded through a current-limiting resistor. The floor or mat dissipates the static charge of personnel approaching the work bench. Special conductive tile or floor treatment can be used when mats are not practical or cause a safety hazard.

ESD Chairs. ESD Chairs should be used during seated operations and grounded via their conductive wheels. These wheels must be cleaned periodically to minimize charge generation and allow charge dissipation to occur.

3.1.9 Summary

Intel uses a full range of electrostatic discharge prevention techniques. We invest in proper employee training, purchase appropriate ESD protection equipment and supplies and adapt our handling and manufacturing procedures for ESD prevention requirements. The same attention to detail is required of all our suppliers, factories, repair centers, and field service staff.

Intel is committed to helping its partners — both suppliers and customers — to manage the ESD problem. If we can be of further assistance in your efforts to eliminate electrostatic discharge damage, please contact the Intel Components Quality Question Line: In the USA 1-800-628-8686 or 1-916-356-7599, or contact your local Intel Sales Office.

3.2 Electrical Overstress

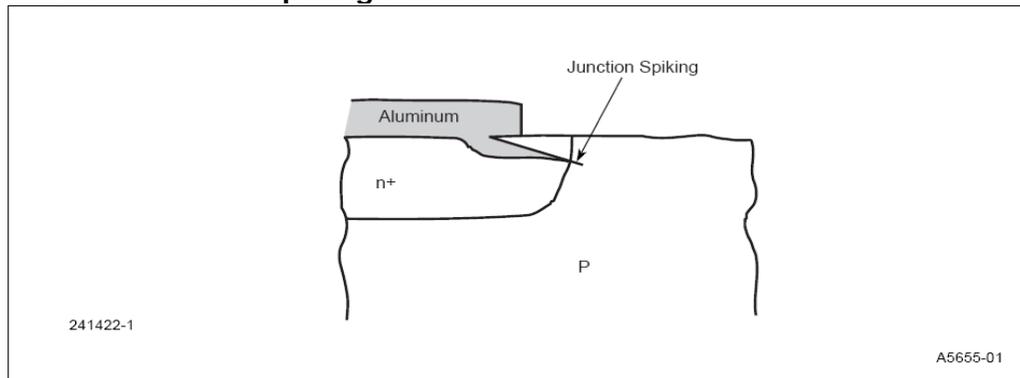
3.2.1 Electrical Overstress

EOS is the number one cause of damage to IC components. This section describes EOS and how to prevent it.

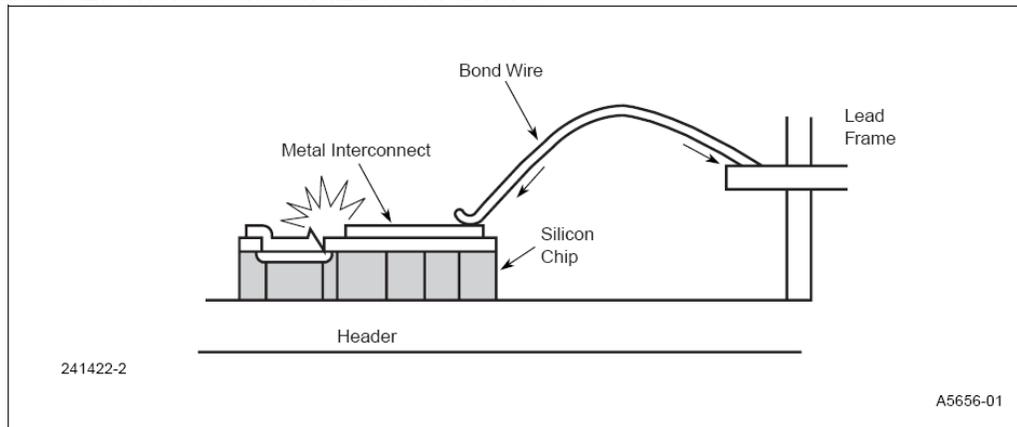
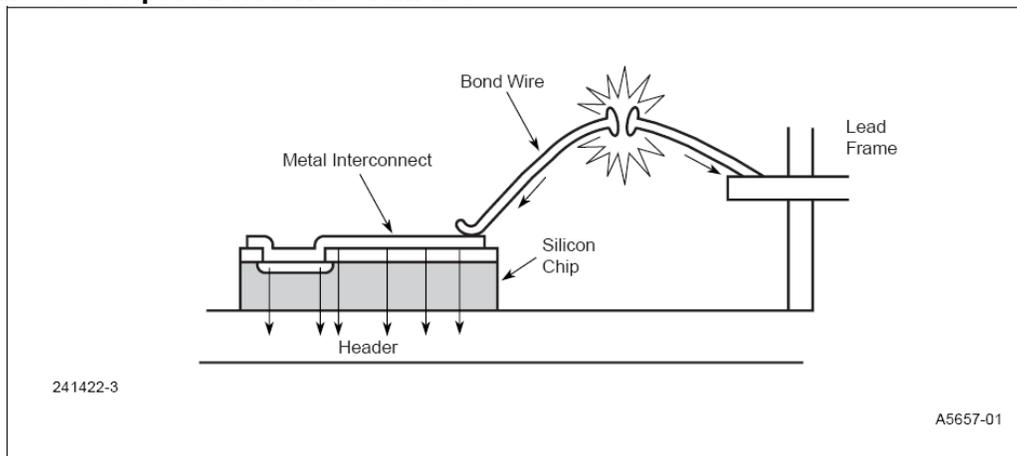
3.2.2 How EOS Damages a Component

Damage is caused by thermal overstress to a component's circuitry. The amount of damage caused by EOS depends on the magnitude and duration of electrical transient pulse widths. We can broadly classify the duration of pulse widths into long ($>100 \mu\text{s}$) and short ($<100 \mu\text{s}$) types, and magnitude into exceeding an individual component's EOS threshold. For short pulse widths the most common failure mode is junction spiking.

Figure 3-1. Junction Spiking Failure



For long electrical pulse widths the most common failure modes are melted metallization and open bond wires.

Figure 3-2. Melted Metallization Failure**Figure 3-3. Open Bond Wire Failure**

3.2.3 Common Causes of EOS

Inadequate work procedures:

- Lack of standard work procedures
- Incorrect device orientation
- Insertion/removal of components with power applied
- Boards/units not well connected and then power applied



ESD/EOS

Noisy Production Environments:

- Lack of power line conditioners
- Lack of AC line filters

Improper testing at device or board level can create EOS:

- Hot switching effect
- Incorrect test sequence such as application of signals to Device Under Test (DUT) before powering up chip
- Application of excessive voltages to chip beyond spec limits
- Poorly designed electrical stress tests such as burn-in which overstresses sensitive chips

Use of low quality power supplies:

- Poor design considerations can lead to noise sources especially in switching power supplies
- Lack of power supply overvoltage protection circuits
- Insufficient line filtering and/or transient suppression at the input stage of power supplies
- Incorrect selection of fuse providing inadequate protection

Lack of Proper Equipment and Line Monitoring:

- Equipment not properly grounded
- Loose connections causing intermittent transient events
- Poor wire maintenance
- AC supply lines not monitored for voltage transients or noise

3.2.4 Prevention of EOS

Establish and follow proper work procedures



Conduct regular AC supply line monitoring and, if necessary, install EOS line control equipment such as incoming line filtering and transient suppression circuits.

Ensure proper testing of components and boards:

- Check test programs for hot switching and incorrect test sequence
- Solicit maximum specification ratings from manufacturers to ensure devices are not overstressed
- Ensure reliability stress tests are properly designed, especially during burn-in
- Check for excessive noise levels
- Use "transzorb" to clamp voltage spikes

Use quality power supplies with the following features:

- Overvoltage protection
- Proper heat dissipation
- Use of fuses at critical locations

Adhere to a strict equipment maintenance program to ensure:

- Equipment is properly grounded
- There are no loose connections

3.3 References

- [1] Edward S. Yang, "Microelectronic Devices", McGraw-Hill, 1988
- [2] Kohlhass, Phil, "Controlling Potential Static Charge Problems", 3M Nuclear Products Dept., St. Paul, MN
- [3] "Electrical Overstress/Electrostatic Discharge Symposium Proceedings", The EOS/ESD Association and ITT Research Institute, 1985 and 1986
- [4] DOD-HNBK-263, Electrostatic Discharge Control Handbook for Protection of Electrical and Electronic Parts, Assemblies and Equipment", 2 May, 1980



ESD/EOS

- [5] McFarland, W.Y., "The electronic benefits of an effective electrostatic discharge awareness and control program—an empirical analysis". 1981 Electrical Overstress/Electrostatic Discharge Symposium Proceedings
- [6] For more information regarding PGA insertion, request a copy of item # 8130 by calling the Intel FAXBACK line U.S. 1-800-628-2283 or 1-916-356-3105 Europe 44-793-4960646

3.4 Revision Summary

Original publication